

FAUX HIDE™ ASSEMBLY INSTRUCTIONS



Items required: 6 Rake Me Over tiles, 8 stenciled Rake Me Over tiles, Instructions, FLORDots™, Stanley® Carpet Knife (recommended) or equivalent.



Make sure you have a **fresh blade** in your carpet knife and an appropriate, protected surface for cutting. (We recommend using a cutting mat or flattened FLOR boxes.) Be sure the **protected cutting surface** is larger than the tile dimensions to safeguard against run away cuts. It is a good idea, to change or rotate your blade edge every 4-6 cuts. Having a sharp blade makes precise cutting easier.



Using ample pressure, begin slowly cutting the back of a stenciled tile along the etched outline. **Take your time.** It may require a few passes along the line to achieve a clean cut. **Always keep your body and your non-cutting hand clear of the path of your blade.** Safety first!



Don't worry if you go outside the lines. Please note that the outside points – where one piece connects to another – are the areas where you'll want to be sure you hit the outline.




If you make a mistake, it can be easily fixed using FLORDots. Simply apply a FLORDot to the miscut area and make sure it is well adhered to the backing.




Continue to cut along the stenciled line, right through the FLORDot. The shag in Rake Me Over is forgiving and will hide any rough edges.



Please be sure to repurpose any waste pieces or call 866.281.3567 for details on how we can help you recycle them.

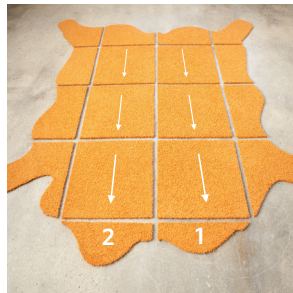

Your cut pieces will be installed around an inset of full size tiles (see diagram). Please note the **directional arrows**, they should all be pointing toward the pieces numbered 1 and 2.

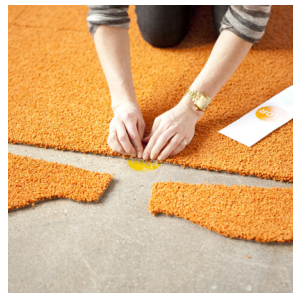

With the FLORDots provided, connect the edges of each piece to its neighbor, pressing firmly once in place. Be sure to separate the FLORDots. The FLORDots are designed to allow you to adjust and move pieces within the first few hours. The adhesion will grow stronger over time.



Once assembled, vacuum your rug as usual and enjoy. Don't forget to pat yourself on the back for an amazing job. As always, call us with questions 866.281.3567 or email us at support@FLOR.com.

RECOMMENDED FLORDOT™ PLACEMENT AND NOTING OF DIRECTIONAL ARROWS.

